

MINI TABLE TOP TRI

一儿工快速便携式三脚架

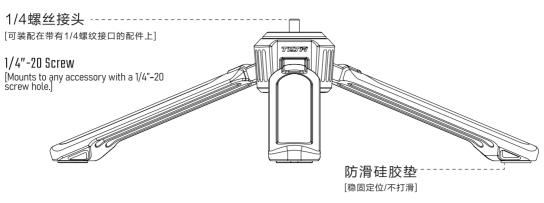

Anti-Slip Silicone Pad [Prevents device from moving while resting on a surface.]

使用介绍 / INTRODUCTION

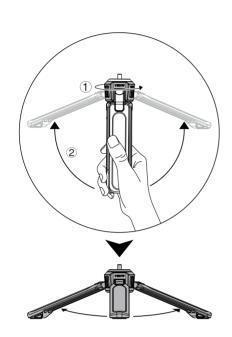


释放三脚架

转动轴钮①可快速释放三脚架②轻松实现低角度拍摄

Expanding the Tripod

Rotate 1) the release counterclockwise to expand 2 the tripod legs. Easily achieve a low angle shot.

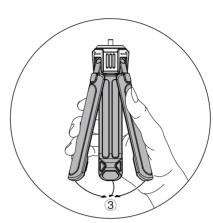



收拢三脚架

将三脚架三轴合起来③,锁 紧轴钮④可轻松收拢起来。

Collapsing the Tripod

Pull together the tripod legs as shown ③. Rotate 4 the release clockwise to lock the tripod.


-)搭配RS2云台使用 TACHING TO DJI RS2


1. 将三脚架①对准云台手柄底部的1/4螺纹孔, 拧紧即可使用。

Align 1) the tripod with the 1/4"-20 screw hole on the bottom of the grip. Tighten the tie down screw.

2. 安装完成后转动三脚架的轴钮②释放三脚架, 可稳固平放于平面上。 Rotate 2 the release counterclockwise to expand the

tripod legs. Place the device on a surface.

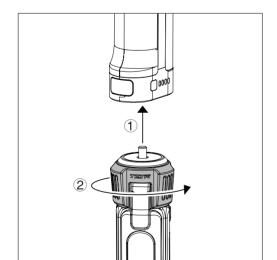

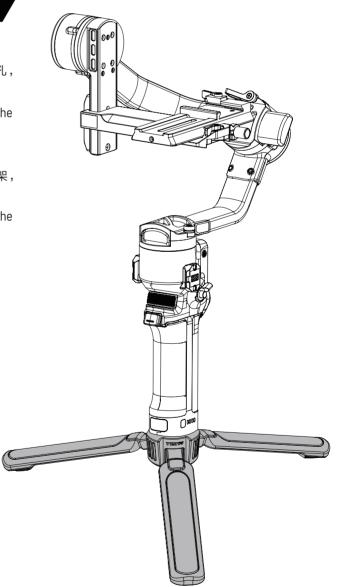

TACHING TO TILTA CAMERA CAGE

以TILTA BMPCC 6K PRO全笼为例,将三脚架安装 在笼子底部的1/4螺纹孔上,释放三脚架即可稳固平放。

Take the Tilta BMPCC 6K Pro camera cage as an example. Align the tripod with the 1/4"-20 screw hole on the bottom of the camera cage. Tighen the tie down screw and expand the tripod legs to place the camera on a surface.

